

Four Tune Selector Switch Instructions

This guide outlines the use of the Four Tune Selector Switch.

The Four Tune Selector Switch allows you to program or select up to four tunes on your vehicle. Tunes can be selected on-the-fly while the vehicle is running.

Installing the switch

To install the switch, plug the cable in as per the photo. Ensure the red wire is facing to the left as in the left photo.

To install the chip into the car, loop the cable as per the photo on the right and insert the chip into the ECU.



Programming

To program the four positions, select the appropriate position using the switch and program the chip as you normally would, as per the [J3 Chip Programming Instructions](#). Rotate the switch fully anti-clockwise for position 1.

Using the switch

To use the switch, simply rotate the switch to the appropriate position. Rotate the switch fully anti-clockwise for position 1. Blank positions will cause the ECU to go into limp home mode.