

IMPORTANT NOTES ON YOUR BOOST CONTROLLER

- Consult your local specialist before setting your desired boost pressure and FCD boost level
- Setting boost beyond your engines capability may result in engine damage
- To safeguard against "pinging" or detonation, always use the highest octane fuel available
- Please check www.turbosmartonline.com for the latest updates and information on fitting your Turbosmart FCD

RECOMMENDATIONS

- Turbosmart recommends that your FCD is fitted by an appropriately qualified technician
- Turbosmart recommends that the engines Air/Fuel ratio is checked once the FCD and desired boost pressure is set, as any
 increase in boost pressure or incorrect setting of the FCD can cause the engine to run "LEAN", resulting in possible engine
 damage

HOW TO INSTALL YOUR FUEL CUT DEFENDER

CONTENTS

Please check that the following items have been provided in your FCD 1 Kit


Quantity	Description	Use
1	FCD 1	Clamping the pressure signal to the MAP sensor
1	Mounting bracket	Mounts the FCD1 to a secure location
1	M4X4 Button head screws	Secures FCD1 to the bracket

FITTING YOUR FUEL CUT DEFENDER

- Locate the vehicles MAP (Manifold Absolute Pressure) Sensor, it is connected to the engines wiring harness by three wires, and has one pressure hose joining it to the inlet manifold (Fig. 1)
- If you are unsure of the location of the MAP sensor please refer to the specific factory workshop/repair manual for your model of vehicle
- Install the FCD T-piece between the MAP sensor and the pressure signal. Make sure the arrow is pointing towards the MAP sensor
- Ensure all hoses are not cracked, blocked, kinked or restricted and all connections are secured with hose clamps
- Mount the FCD with the supplied bracket in a suitable position to allow access for adjustment and be adequately shielded from heat, i.e. positioned at least 100mm or 4" from the turbine housing or the exhaust manifold

Figure 1 MAP Sensor (Subaru WRX)

Figure 2 Clamp dial

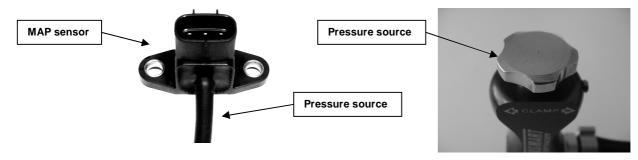

- Before making any adjustment the Clamp Dial (Fig. 2) will need to be fully closed (anti-clockwise)
- Adjustment to the FCD is made by turning the *Clamp Dial*
- Turn clockwise to increase the fuel cut level and anti-clockwise to decrease the fuel cut level
- Turbosmart recommends that the fuel cut limit is set 2-3 PSI (0.14 0.21 BAR) above the desired engine boost pressure
- If you wish to lock the setting of your FCD to avoid further adjustment, use a 2mm Allen key to tighten the detent grubscrew in the side of the FCD until the adjustment knob is locked

TROUBLE SHOOTING

If experiencing difficulties the following checks will cure 99% of problems experienced when fitting a Turbosmart FCD

- Check that the FCD is installed on the correct engine sensor. (MAP sensor) (fig. 1)
- Check the joining hoses for splits, cracks or loose connection
- Check that the joining hoses are not blocked or kinked or restricted
- Check to see if the FCD is blocked or contaminated with dirt, oil build up or debris

The **Turbosmart** Pledge

DO NOT USE ANY TURBOSMART PRODUCT UNTIL YOU HAVE CAREFULLY READ AND UNDERSTOOD THE FOLLOWING AGREEMENT.

Please call if you have any questions or do not understand this agreement. Refer to our brochure, website or catalogue for terms and conditions and further information regarding your product. Turbosmart appreciates your business and pride ourselves on our customer service. We are always happy to offer you advice and will provide you with help in any way we can. The purpose of this agreement is to avoid any problems or hard feelings.

We sometimes make mistakes, as do our dealers, distributors and suppliers. Even customers can sometimes order the wrong parts. Do not use, modify, install, trial assemble, nick, drop, scratch or adjust any part until you first check for any damage. Damage must be reported immediately. NO EXCEPTIONS. If there are any components missing please contact your authorised reseller immediately upon receipt of your shipment. Missing components must be reported within five (5) business days of receipt. Parts returned for any reason MUST BE IN RESALABLE CONDITION. It is YOUR responsibility, "THE CUSTOMER" to carefully package any returns to avoid shipping damage. Insurance is highly recommended. Credit cannot be issued for damaged goods.

Turbosmart Pty Ltd warranties the quality of the products it designs and manufactures to be free of defects in material and workmanship. This limited warranty is extended only to the original purchaser and may not be transferred or assigned. This limited warranty applies to any product, which after careful inspection by Turbosmart Pty Ltd, after receipt of the product from our authorised reseller, is found to have a defect in either material or workmanship. Any modifications to the product will void any and all warranties and will not be exchanged. Before installation, check new car warranty. Turbosmart Pty Ltd is not responsible for voiding any original manufactures warranty.

All warranty claims must be returned to the authorised reseller, you must return the product and sales receipt, at your own expense, accompanied by a letter stating the reason for the claim. Proof of purchase must be provided with any warranty claim and will be verified with the authorised reseller from which the product was purchased.

If all the above procedures are followed, and the product is found to be defective in either workmanship or material, Turbosmart Pty Ltd shall either repair or replace the product, at its sole discretion, and sole cost. This limited warranty does not cover or apply to any personal injury, labour charges or any other incidental costs or damages caused by the defective product. The individual purchaser acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the individual purchaser agrees to indemnify Turbosmart Pty Ltd and to hold Turbosmart Pty Ltd harmless for any claim related to the item of the equipment purchased. Under no circumstances will Turbosmart Pty Ltd be liable for any damages or expenses by reason of use or sale of any such equipment.

THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY, WHICH APPLIES TO TURBOSMART PTY LTD PRODUCT AS EXPRESSLY GIVEN IN LIEU OF ANY OTHER WARRANTY EXPRESSED OR IMPLIED, INCLUDING THAT OF MERCHANTABILITY. ANY IMPLIED WARRANTY INCLUDING THAT OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICCULAR PURPOSE IS HEREBY LIMITED BY THE SAME TERMS AND TIME LIMITATIONS SET FORTH IN THIS LIMITED EXPRESS WARRANTY AND OTHERWISE EXCLUDED.

EXCEPT FOR THOSE OBLIGATIONS ASSUMED HEREIN, TURBOSMART PTY LTD ASSUMES NO OTHER OBLIGATIONS IN CONNECTION WITH THE SALE OF ITS PRODUCTS.

IN THE EVENT THAT THE INDIVIUDAL PURCHASER DOES NOT AGREE WITH THIS AGREEMENT THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UN-USED CONDITION, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN SIXTY (60) DAYS FROM THE DATE OF PURCHASE FOR A FULL REFUND.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE INDIVIDUAL PURCHASER HAS READ AND UNDERSTOOD THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

Happy motoring! The Turbosmart Team

Turbosmart Pty Limited P.O.Box 264 Croydon, NSW, 2132 Australia ABN: 69 081 069 794 Tel: +(612) 9798 2866 Fax: +(612) 9798 2826 Email: <u>instructions@turbosmart.com.au</u> <u>www.turbosmart.com.au</u> <u>www.turbosmartusa.com</u> <u>www.turbosmart.co.nz</u>