



## iCar3 bt/wifi BLUETOOTH/WIFI Quick Start

Dear friends when you get this exquisite device, please operate as following.

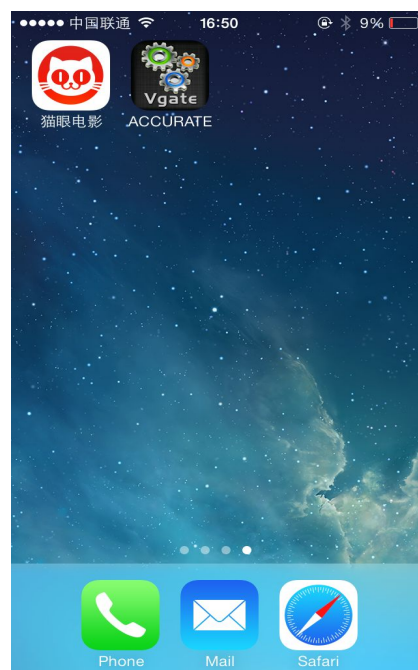

**First Step:** Install related software to your mobile-phone, if your mobile-phone using android system then please download the TORQUE from Android Market,if you mobile-phone is Apple phone(Or iPad) then please download ACCURATE from APP Store.After install the related software to your mobile-phone then all is finished.Of course you also can use the TORQUE and Accurate software from the CD of the device which we supply to you. Please refer to the following pictures.

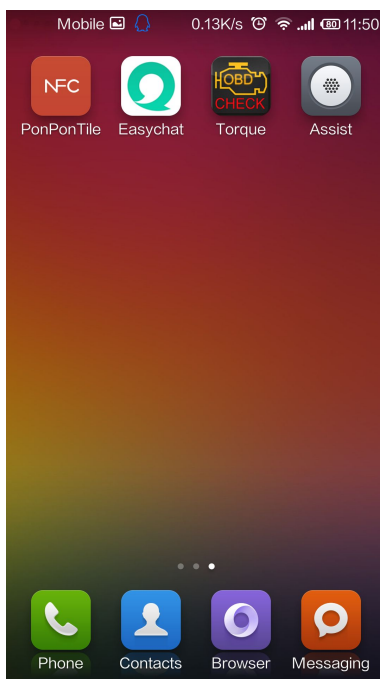

Android

IOS

**Second Step:** Connect the iCar3 Wifi OBD Multi-Scan Tool /iCar3 Bluetooth OBD Multi-Scan Tool to your Car OBD interface, you can find the light of the iCar3 Wifi OBD Multi-Scan Tool / iCar3 Bluetooth OBD Multi-Scan Tool will flash (it shows the the connection is good),then it coming in standby and waiting for working.Usually the CAR OBD interface are under the steering wheel(above the brake),some are hided in the tool box of the hand brake,you can refer to the following picture to find it.



### **\*\*\* iCar3 specially function:**

Vgate develop low power consumption technology to save your vehicle 's battery , Plug the iCar 3 in and leave it in. with the new battery saver function , system will automatically sleep (after 30smins) and wake up. No more require switches or manual button presses.

### **Third Step: connect with mobile-phone**



iCar3 Wifi OBD Multi-Scan Tool (**wifi**) don't need the password to make verification,open the 'Settings' of your mobile phone, select the WLAN,click the (v-link , OBD2 ) then finished operation.


iCar3 Bluetooth OBD Multi-Scan Tool (**Bluetooth**) need the password to make the verification, open the 'Setting' of your mobile-phone, unfold the Bluetooth,click the ' Bluetooth setting' and scan the Bluetooth,choose ' (v-link, obd2, vgate) 'and put the 1234 as password, then finished all operation.



**Forth Step:** After connection and setting , exit and open the related software TORQUE or Accurate, then respectively doing several settings as following:

1. Open Accurate, select '**setting**', click '**OBD II interface**', choose **ELM**,do pretermisssion as instructions, then exit and back. Reopen the software, then it can connect automatically and read data.
2. Open TORQUE, select '**setting**', click **OBD** adapter setting, choose the connection (Bluetooth) and select (v-link, obd2, vgate) , then exit and back. Reopen the software, then it can connect automatically and read data.

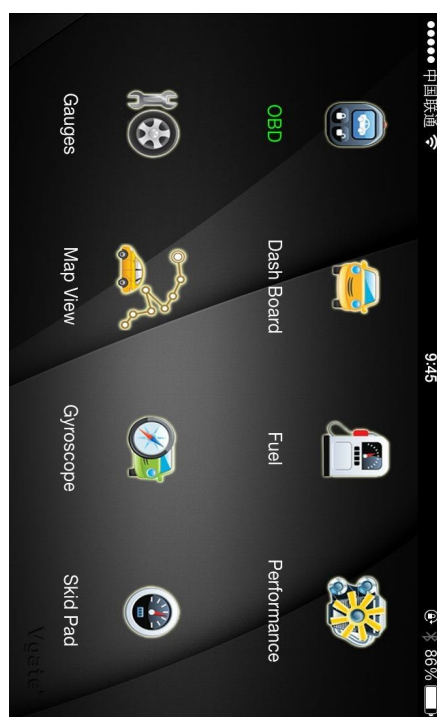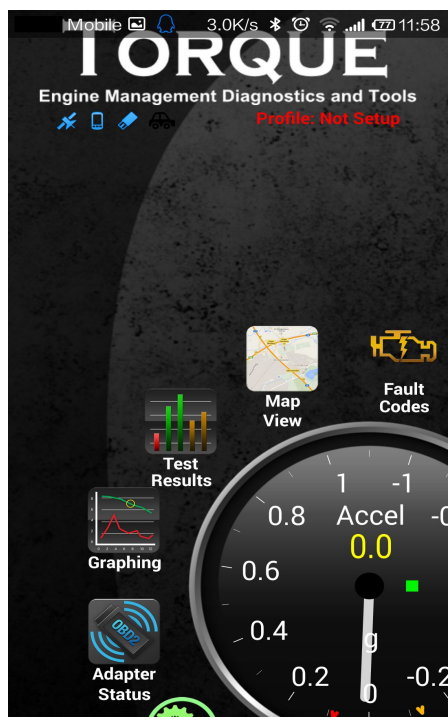

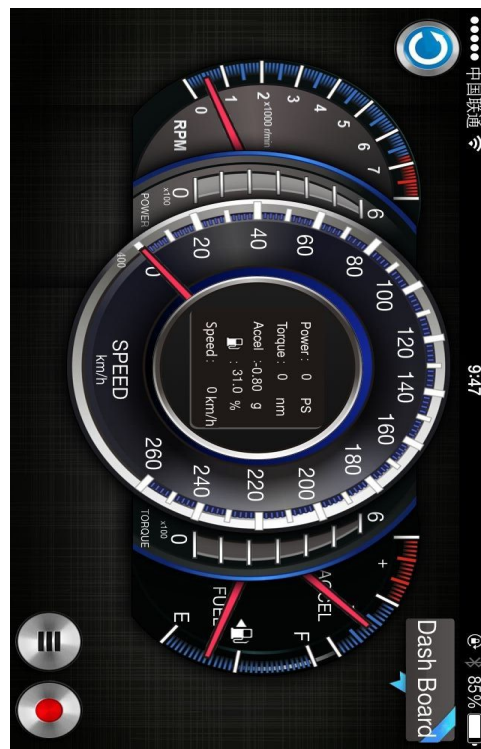

### iCar 3 快速上手

朋友们，当您拿到这个精巧的测试工具后（如下图），请按照如下的步骤进行操作。




#### 第一步：软件安装

先将您的手机安装相对应的测试软件，如果您的手机是安卓系统，请到安卓电子市场下载 TORQUE 的软件；如果您的手机是苹果手机（或者是 iPad），您可以到苹果的软件市场 App Store 里面下载 Accurate 或者 Dashcommand 这个软件。分别将这个软件安装到您的手机上即可，当然您也可以从我们提供的 CD 里面提取 TORQUE 的安装软件和 Accurate 或者 Dashcommand 的安装软件（仅限 iOS 越狱手机）。（如下图是安装好的对应软件）





安卓系统

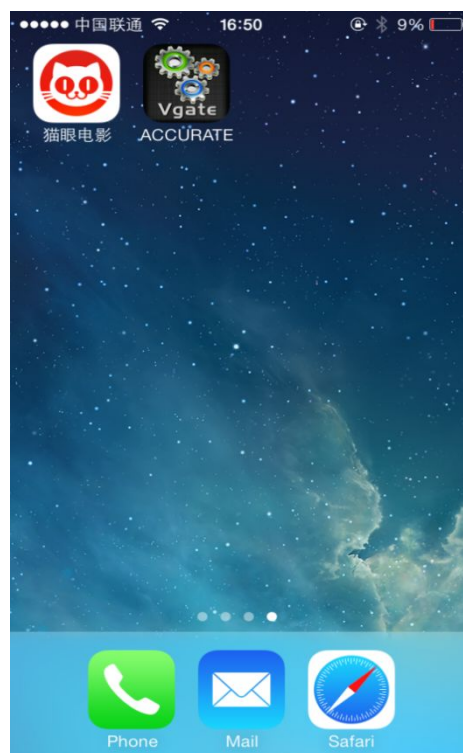

苹果系统

第二步：将您所购买的 iCar 3 插入到汽车的 OBD 接口，此时你可以看到该产品上面的会闪烁一下（表示您已经充分插好这个接口了），随即进入待机状态，等待工作。一般汽车的 OBD 接头都是在方向盘下方（刹车上方），也有一部分车是在手刹的那个工具箱里面，您可以根据下面的图形在您的汽车上面找到。

**\*\*\* iCar 3 的特殊功能：**在汽车熄火后（但是汽车还有电源供出），都不需要拔出 iCar 3, iCar 3 就在 30 分钟后进入睡眠状态进入省电模式。当下次使用的时候，仍然不需要重新拔插 iCar3, 发动汽车就可以自动链接到你的手机或者其他设备上进行测试。当然对于 iCar3 自动开关机的功能只限于市面上 80% 的车型，因为仍然有一部分特殊车型的开机电压不符合 iCar3 的要求。

\*\*\* 想要更详细的了解 iCar 系列，可参考 [www.accurateobd2.com](http://www.accurateobd2.com)

第三步：进行手机连接，如下图所示

1.iCar 3(wifi)是不需要密码校验的，直接到你手机点击设置图标，设置》无线局域网》选取网络（V-Link）》点击连接》OK。

2. iCar 3(Bluetooth)是需要密码校验的，直接到你手机点击设置图标，设置《无线和网络》打开蓝牙并点击蓝牙设置《扫描蓝牙设备》选取 V-Link 并输入密码“1234”》确定 OK



第四步：连接好设置好，退出并打开相对应的软件 TORQUE 或者 Accurate/Dashcommand. 并分别进行几个参数设置一下即可：

1.打开 Accurate,不需要做任何设置，它即刻可以连接上去进行测试。打开 Dashcommand 后，选择 settings>点击 OBD-II interface type>选择 ELM，其他都可以采用默认即可，返回退出，重新打开软件，可自动连接并读取相关数据。

2.打开 TORQUEhou,选择 settings>点击 OBD 适配器设定》选择连接类型（Bluetooth)和选择蓝牙装置(V-link),即可，返回退出，重新打开软件，可自动连接并读取相关

